



#P572 - Victorian Lynn Pendulum Clock

Feel a sense of accomplishment when you create one of these treasured keepsakes. 34"H x 13"W.

#P572 - Assembly Instructions

1. Select your material from a variety of hardwoods or solid core plywood.
2. Measure each pattern piece and cut the work pieces to size accordingly. Sand as necessary.
3. Make all pattern pieces by adhering the paper patterns to the work pieces with a repositionable spray adhesive. Cut the outer shapes and any interior designs. And drill where indicated.
4. Remove all paper patterns. Sand where needed. The edges can be rounded by sanding or using a small roundover router bit if desired.

5. Assemble by first attaching the Front and Back (B) to the Side Panels (C), then attach the Top Floor Spacer (P). Now, attach the Roofs (I) and the Crest (A). Attach this assembly to Top Floor (H).


Now, attach Front and Back (J) to the Side Arches (K). Then, attach the Top and Bottom Spacers (G). Attach this assembly to Bottom Floor (L). And then attach the Top Floor assembly to the Top Spacer (G). Now, attach the Dial Underlays (D) and (O), Top Overlay (E), Back Overlay (Q), Angel Overlay (R), and Front Rails (F) and Side Rails (S).

Next, attach the clock movement (excluding the pendulum). Then carefully lay the clock on its front and attach Bottom Bracket (M) into place. Then lay the clock onto its back and attach Center Bracket (N). Now hang the pendulum rod from the movement and adjust the length by breaking off sections in 1" increments.

**GREAT AMERICAN
SCROLLSAW**
DOWNLOADABLE PATTERNS™




The Berry Basket © Copyright 2002 • All Rights Reserved
www.greatamericanscrollsaw.com • a division of The Berry Basket

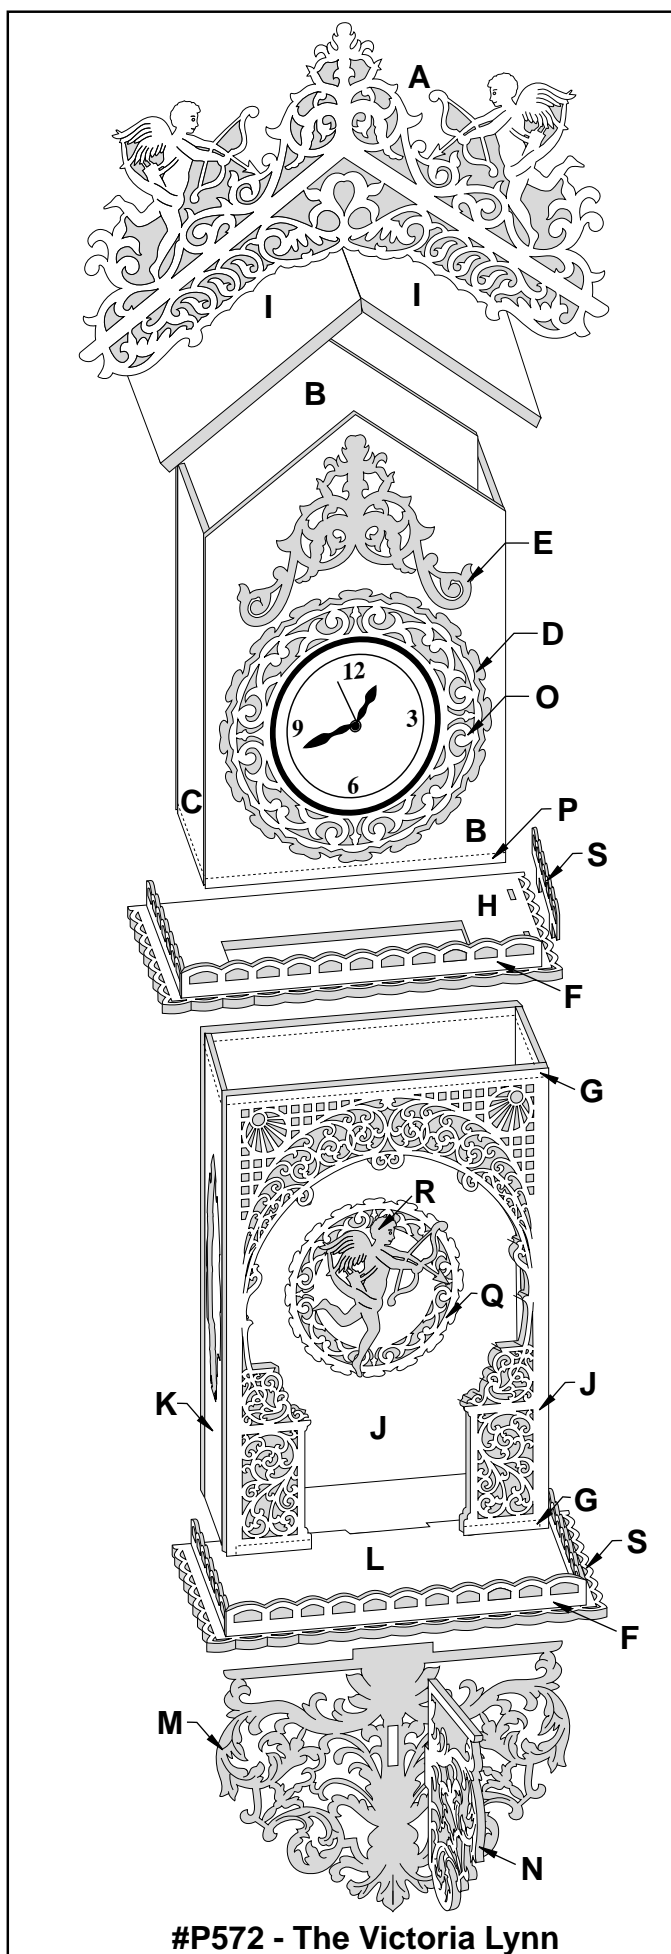


#P572 - The Victoria Lynn


#P572 - The Victoria Lynn

Description	Item	Qty	Size
Crest	A	1	1/4"T x 8 1/2"W x 13 1/2"L
Front & Back	B	1 ea	1/4"T x 7 1/2"W x 11 3/4"L
Window Panel	C	2	1/4"T x 4 1/2"W x 8 3/4"L
Dial Underlay	D	1	1/8"T x 6 7/8"W x 6 7/8"L
Top Overlay	E	1	1/4"T x 5"W x 6 1/4"L
Front Rail	F	2	1/8"T x 1 1/4"W x 9"L
Top & Bottom Spacer	G	1 ea	1/4"T x 4 1/2"W x 7 1/2"L
Top Floor	H	1	1/4"T x 6 1/2"W x 10 1/4"L
Roof	I	2	1/4"T x 5 3/4"W x 7 3/4"L
Front & Back	J	1 ea	1/4"T x 8"W x 11 1/2"L
Side Arch	K	2	1/4"T x 4 1/2"W x 11 1/2"L
Bottom Floor	L	1	1/4"T x 6 1/2"W x 10 1/4"L
Bottom Bracket	M	1	1/4"T x 6 3/4"W x 8 7/8"L
Center Bracket	N	1	1/4"T x 3 7/8"W x 5 3/8"L
Dial Underlay	O	1	1/8"T x 6 3/8"W x 6 3/8"L
Top Floor Spacer	P	1	1/4"T x 4 1/2"W x 7"L
Back Overlay	Q	1	1/8" - 1/4"T x 4 5/8"W x 4 5/8"L
Angel Overlay	R	1	1/16" - 1/8"T x 3 3/4"W x 4 1/4"L
Side Rail	S	4	1/8"T x 1 1/4"W x 5 3/4"L

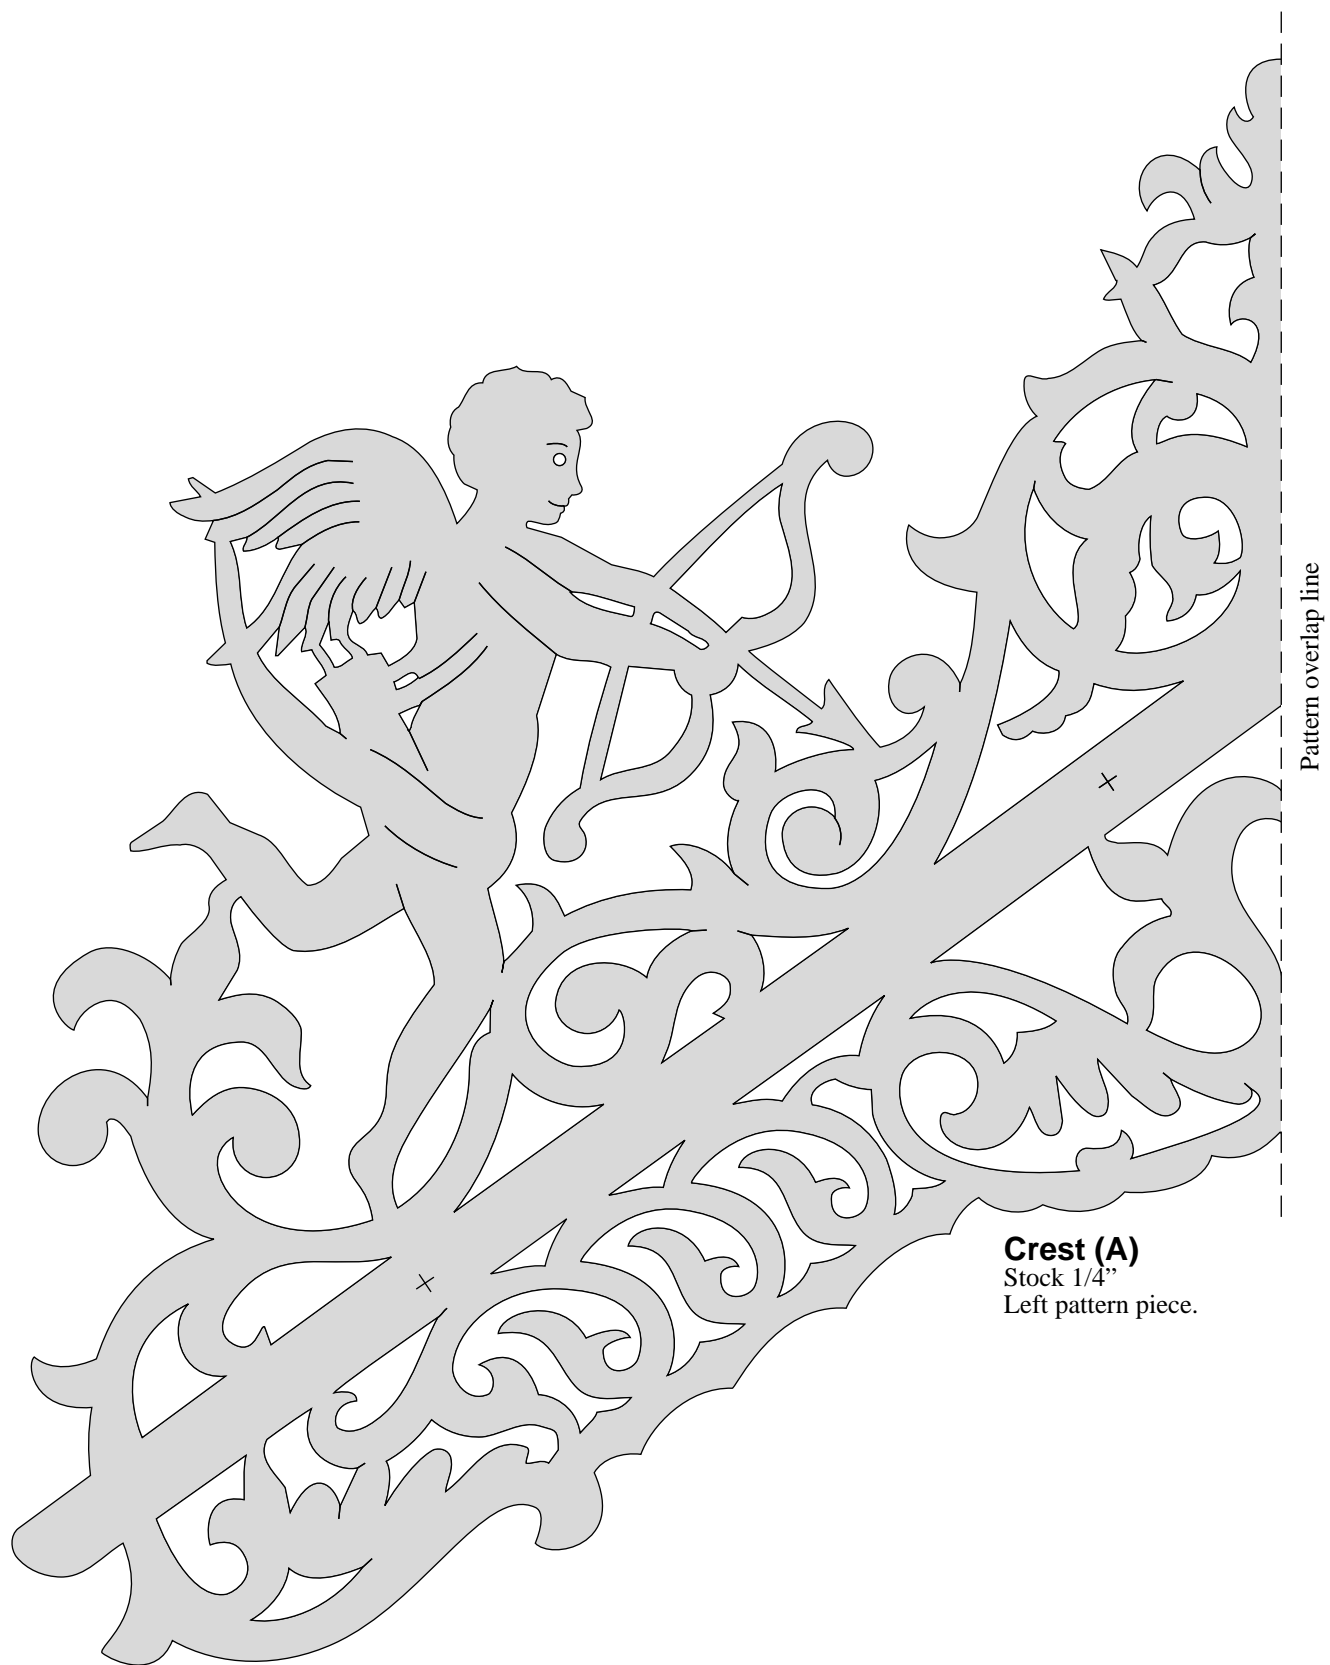


Crest (A)
Stock 1/4"
Left pattern piece.

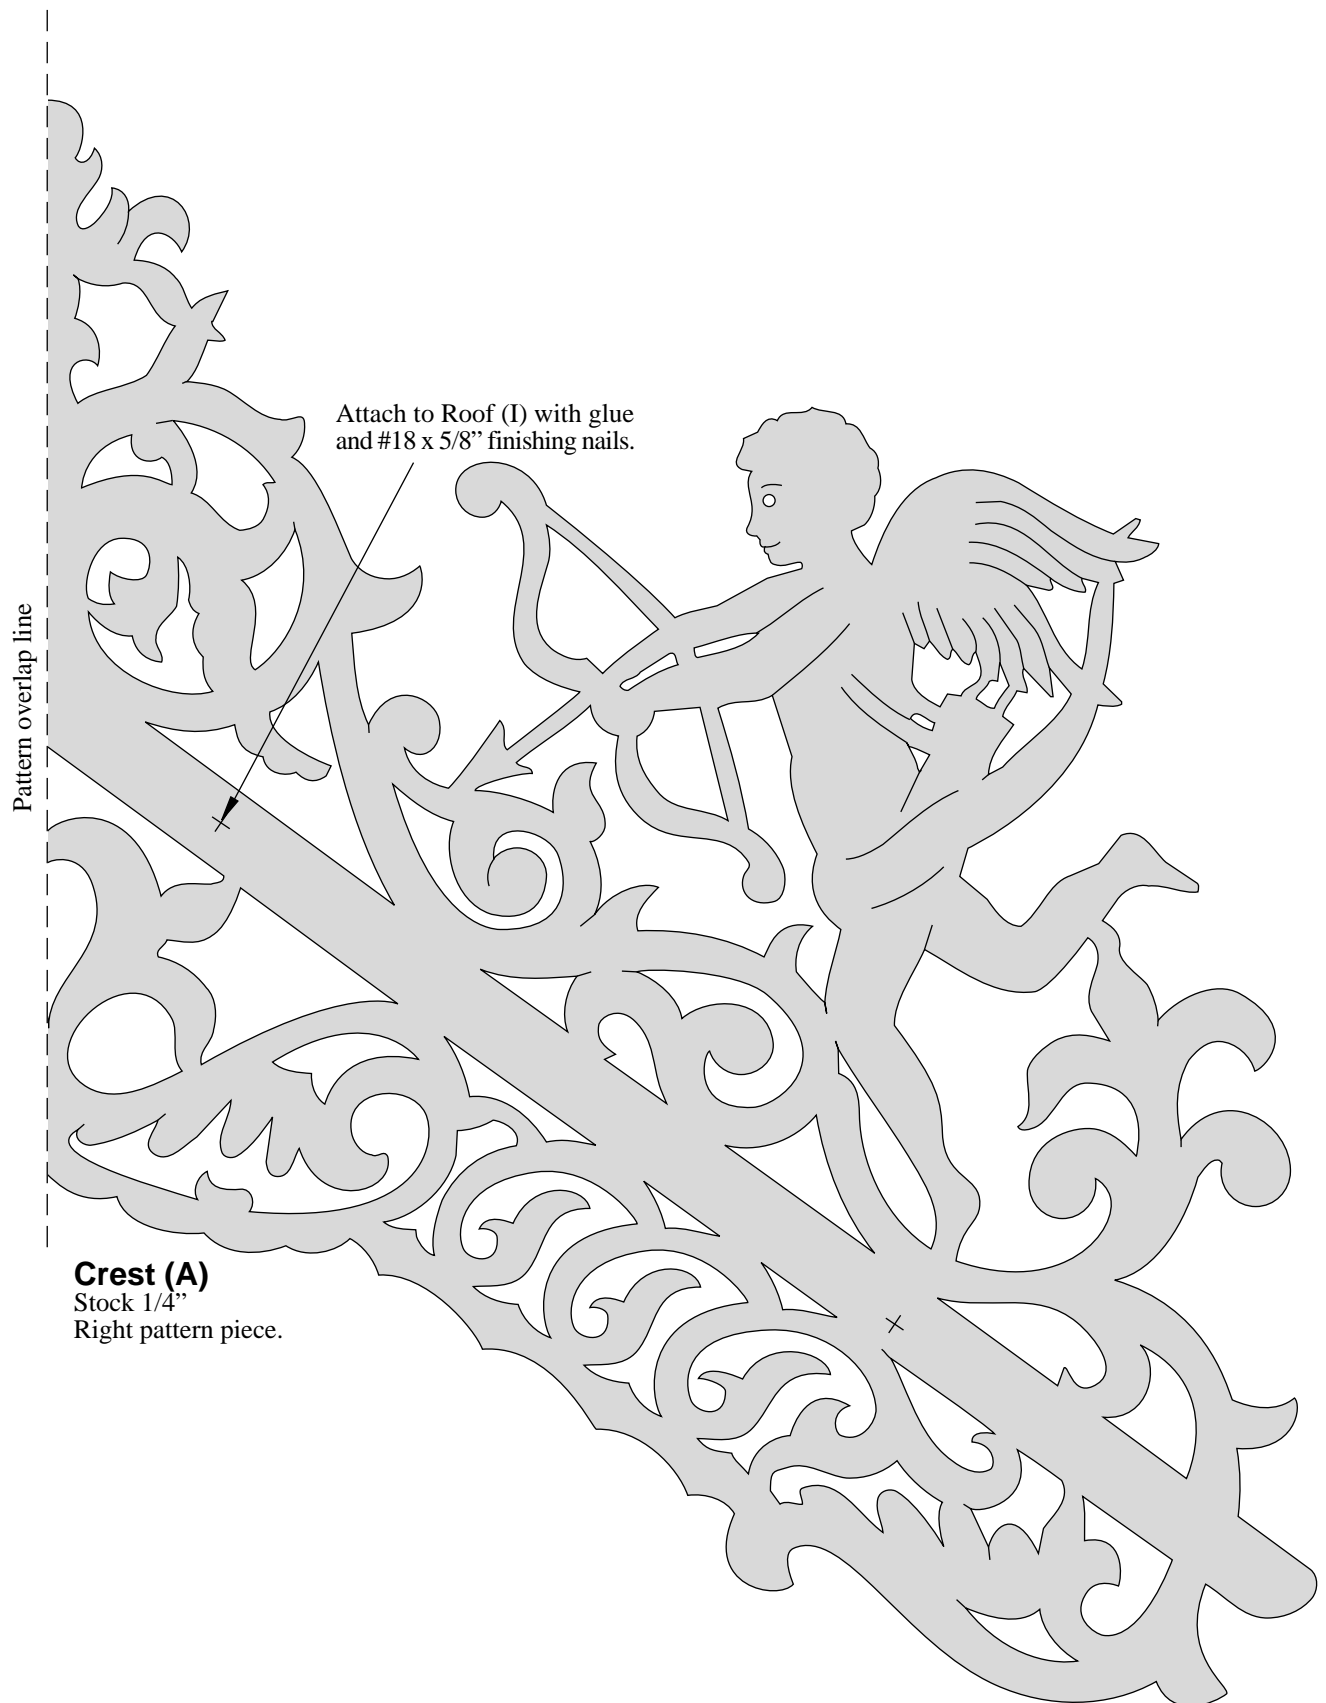

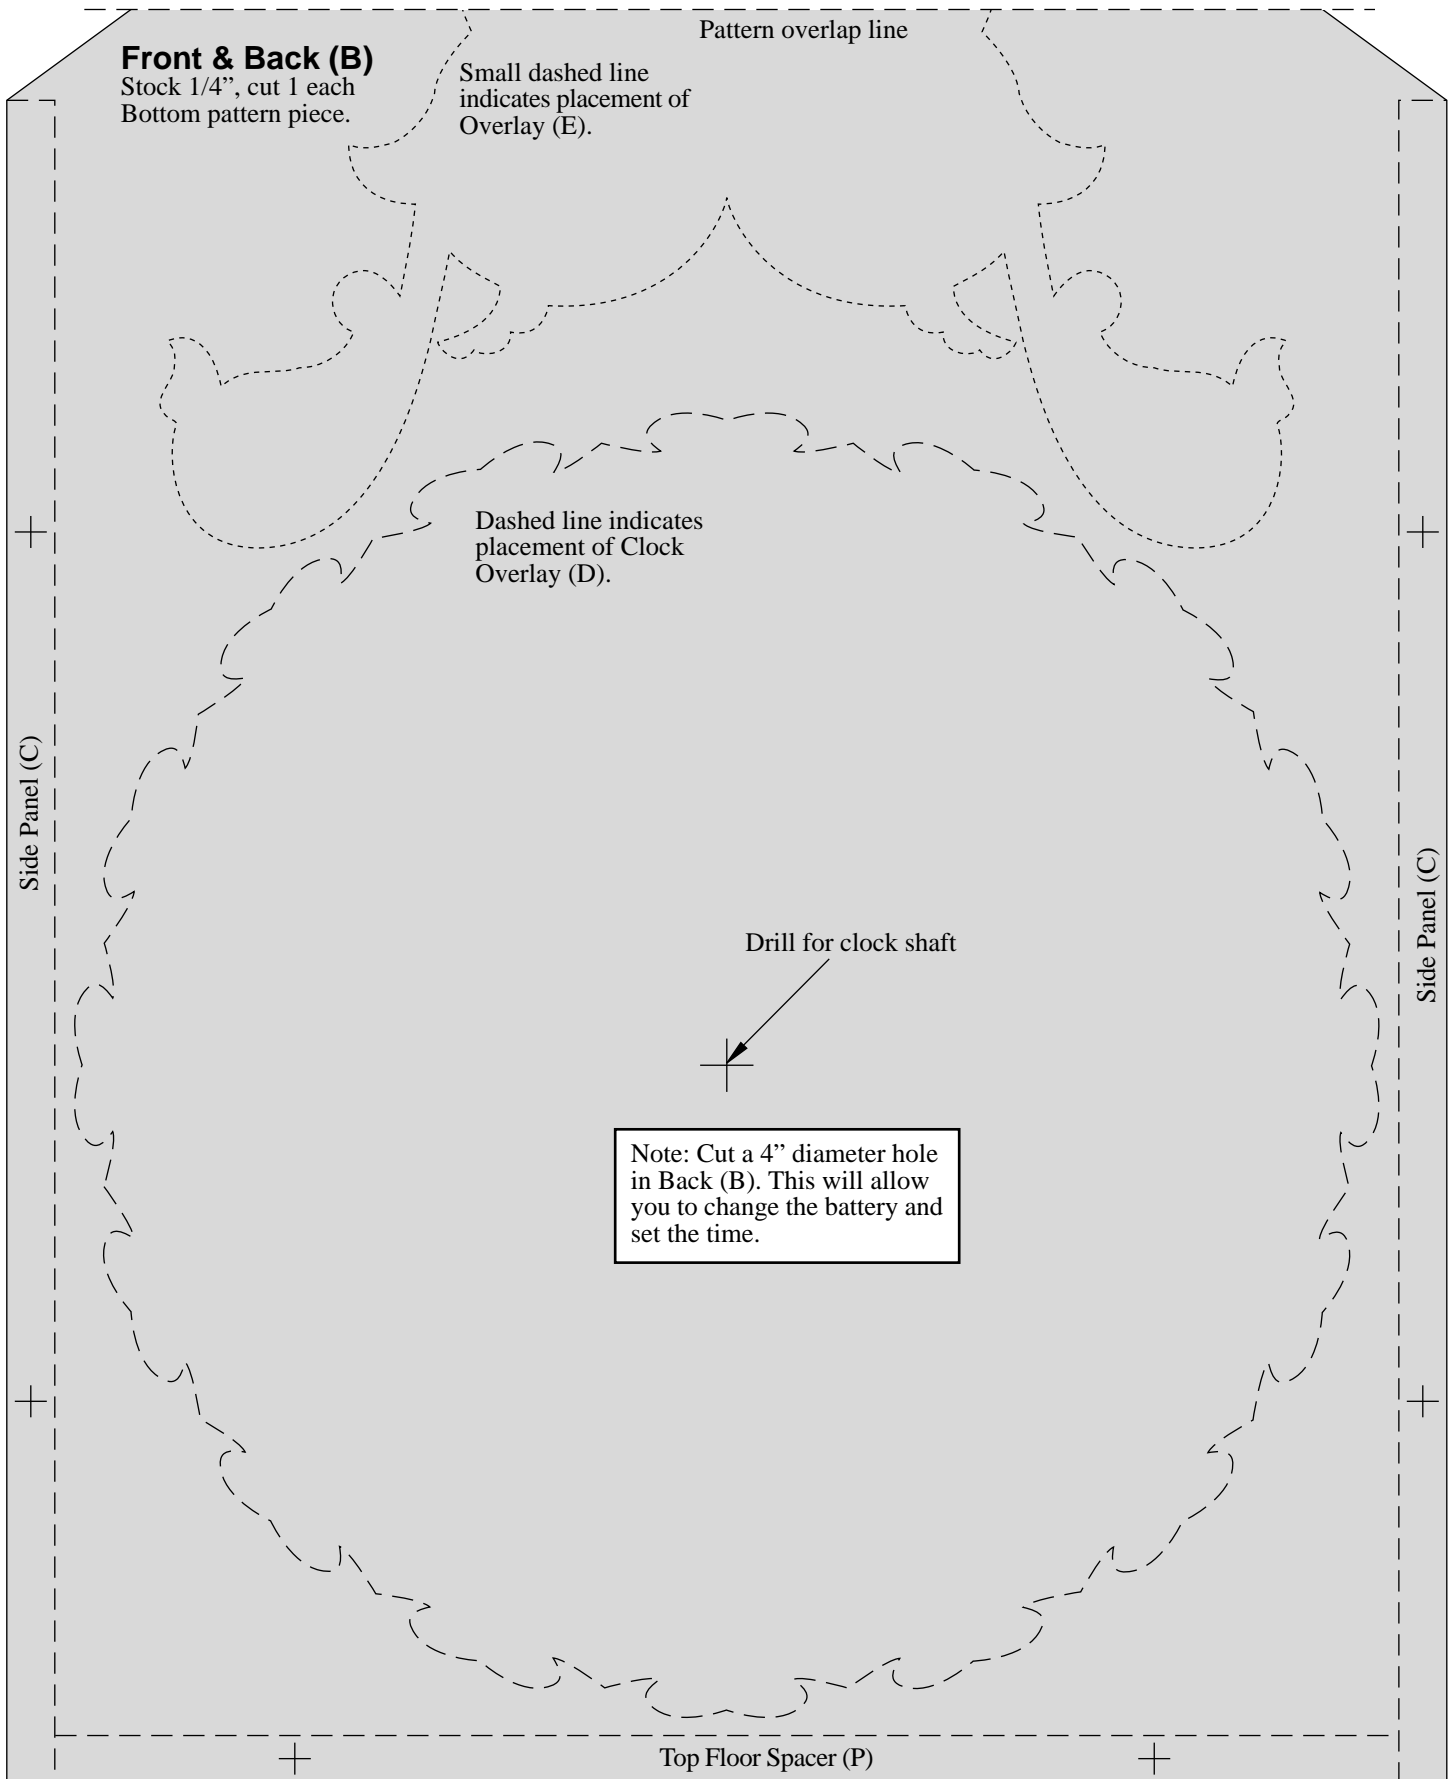


Front & Back (B)

Stock 1/4", cut 1 each
Top pattern piece.

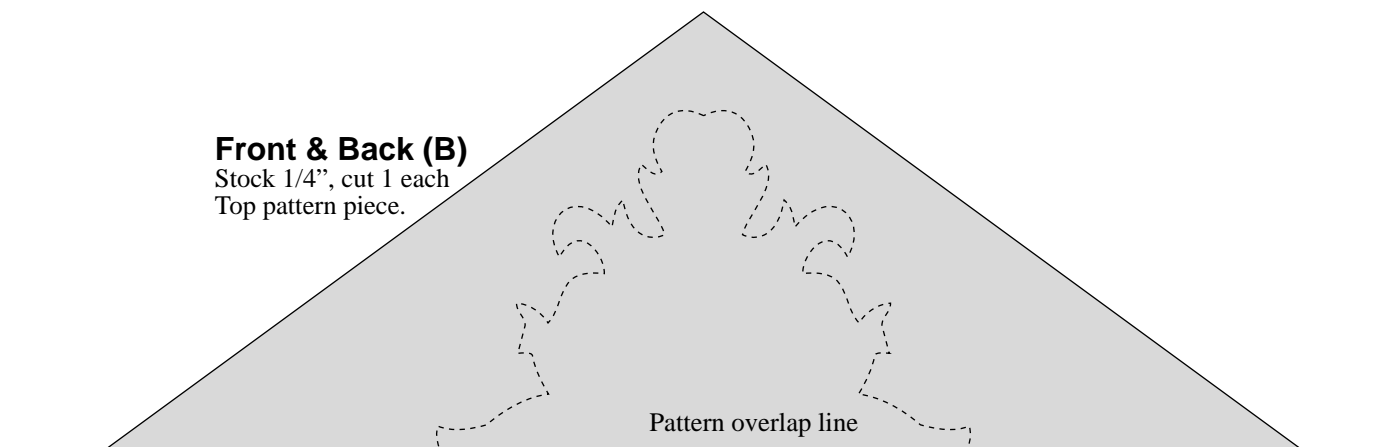

Dial Underlay (D)


Stock 1/8"

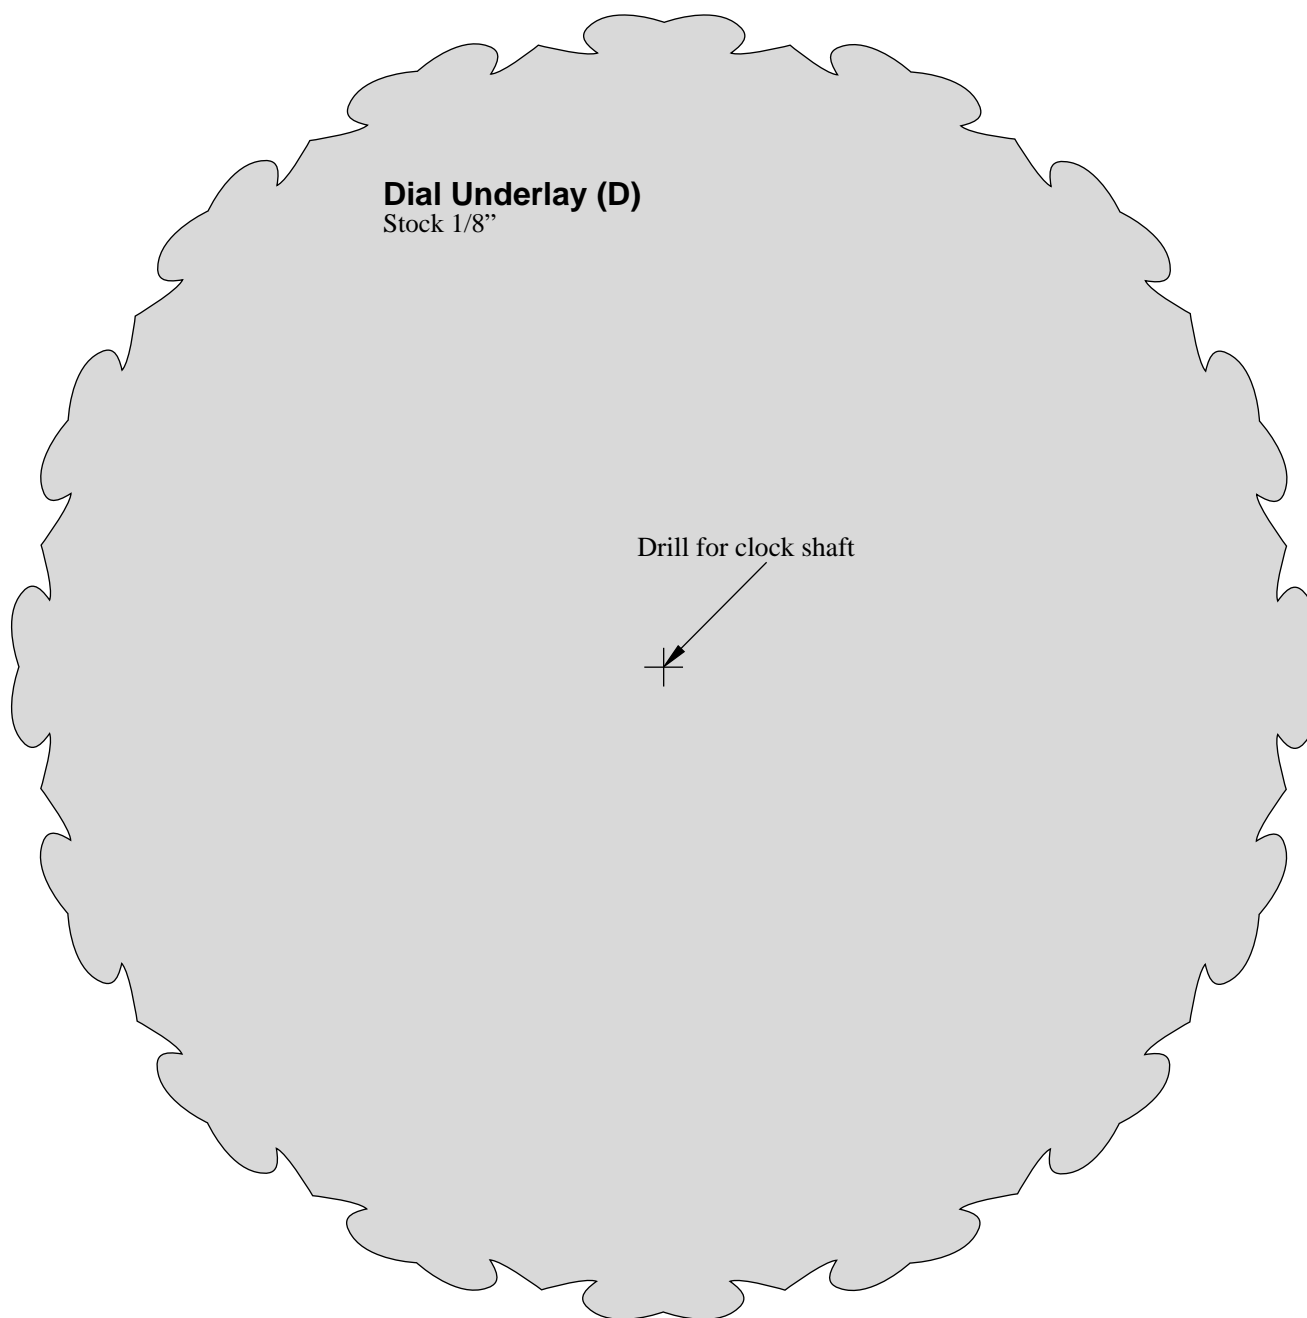


Window Panel (C)

Stock 1/4", cut 2



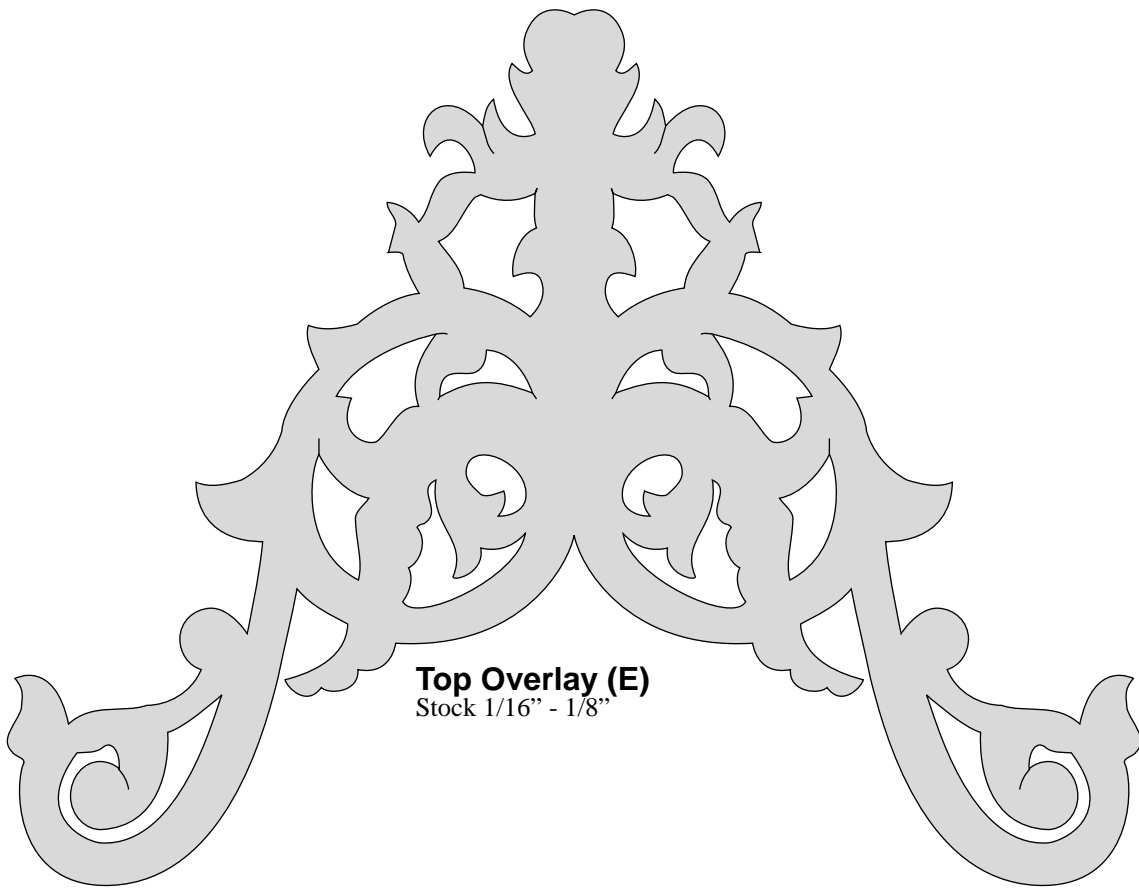



Top Overlay (E)
Stock 1/16" - 1/8"

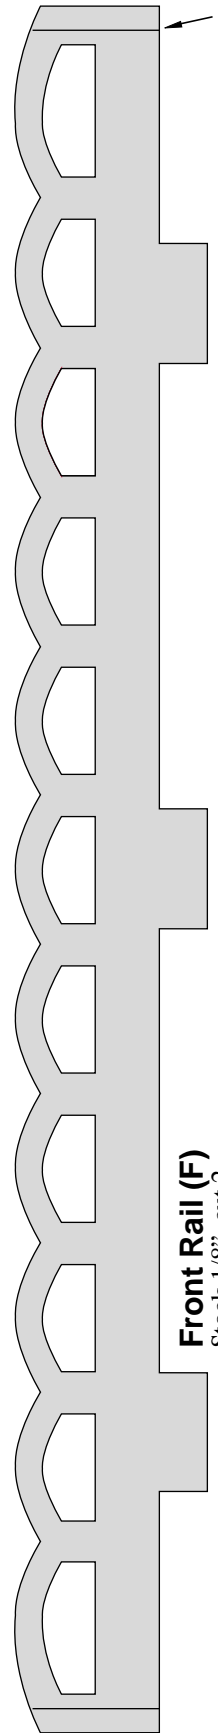



Front Rail (F)
Stock 1/8", cut 2

Note: Sand 45° angle to fit
Front and Side Rails together.

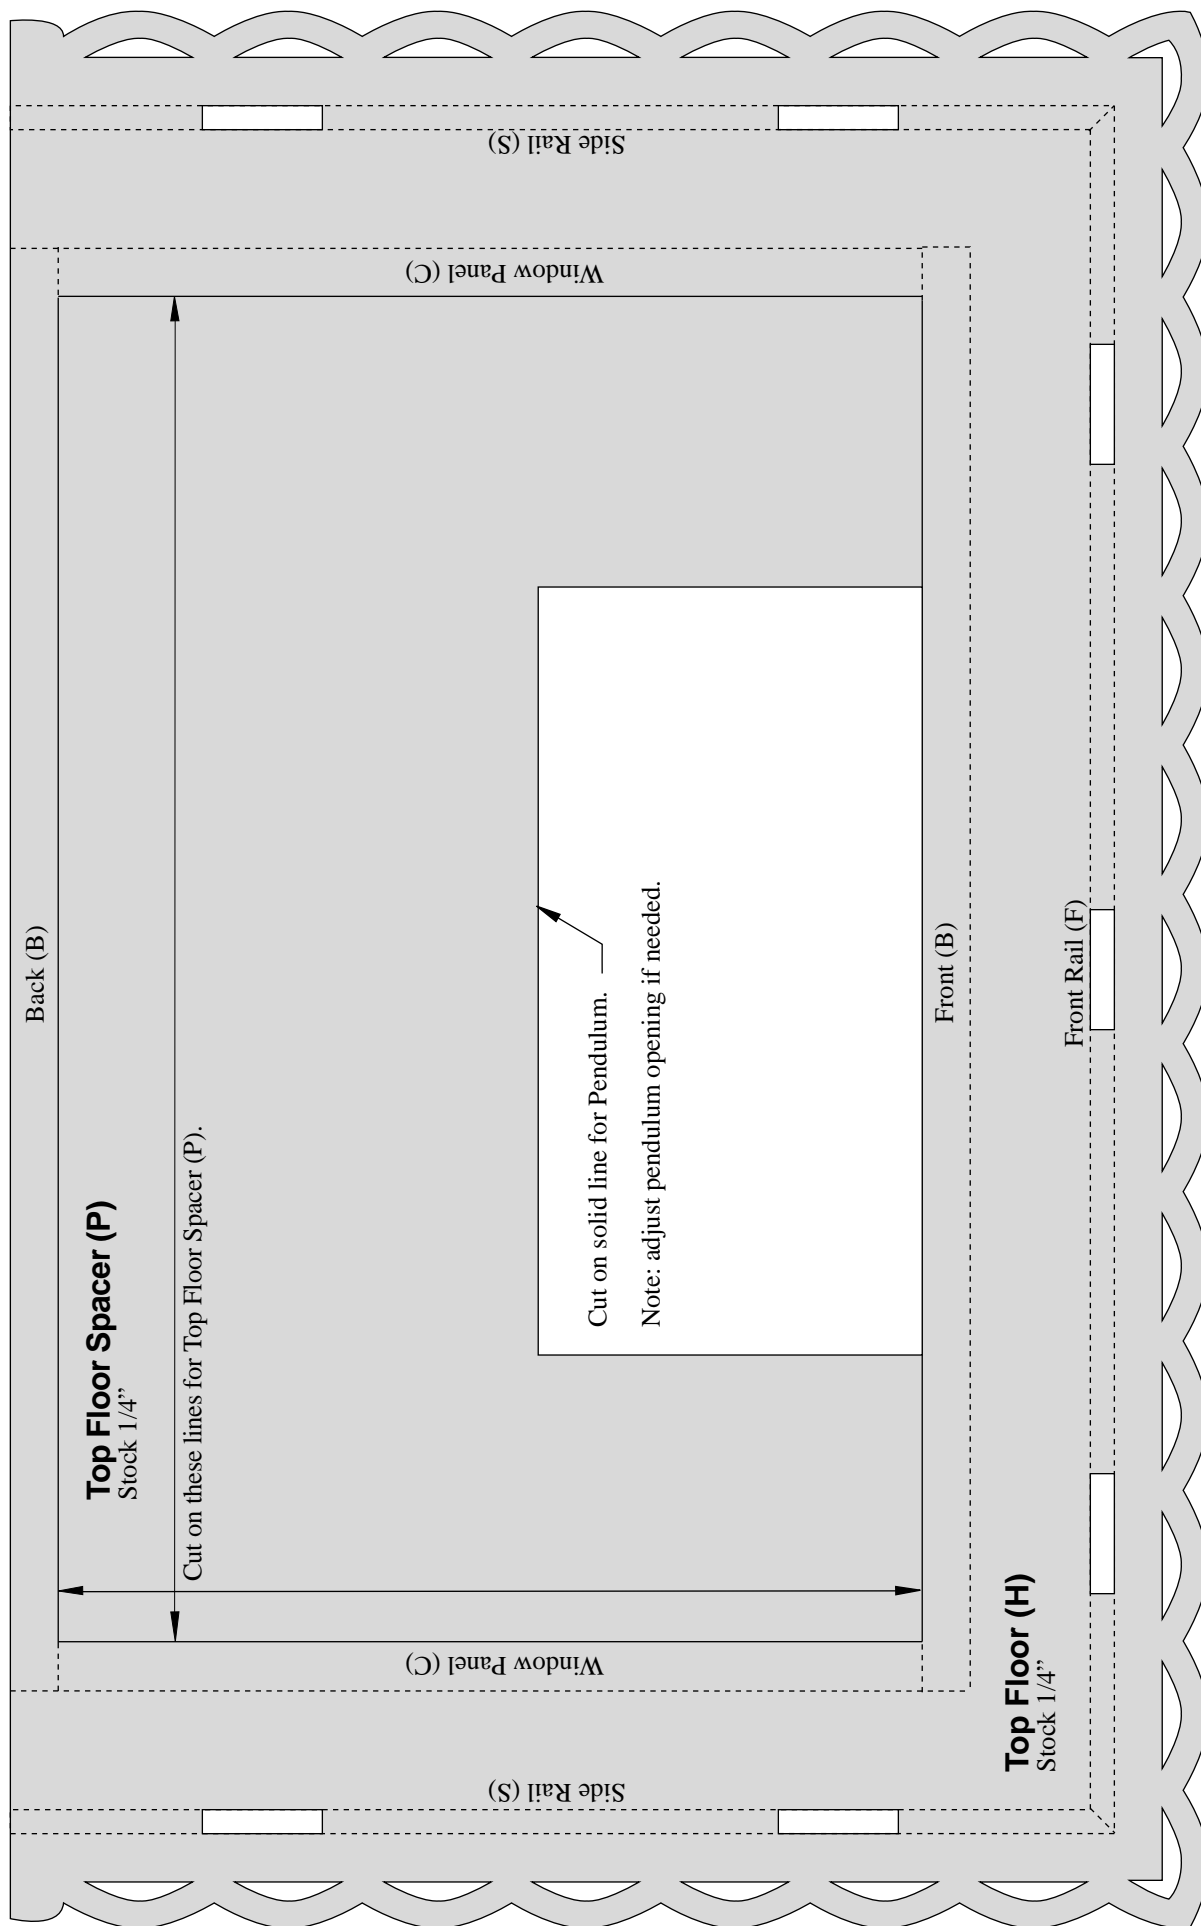

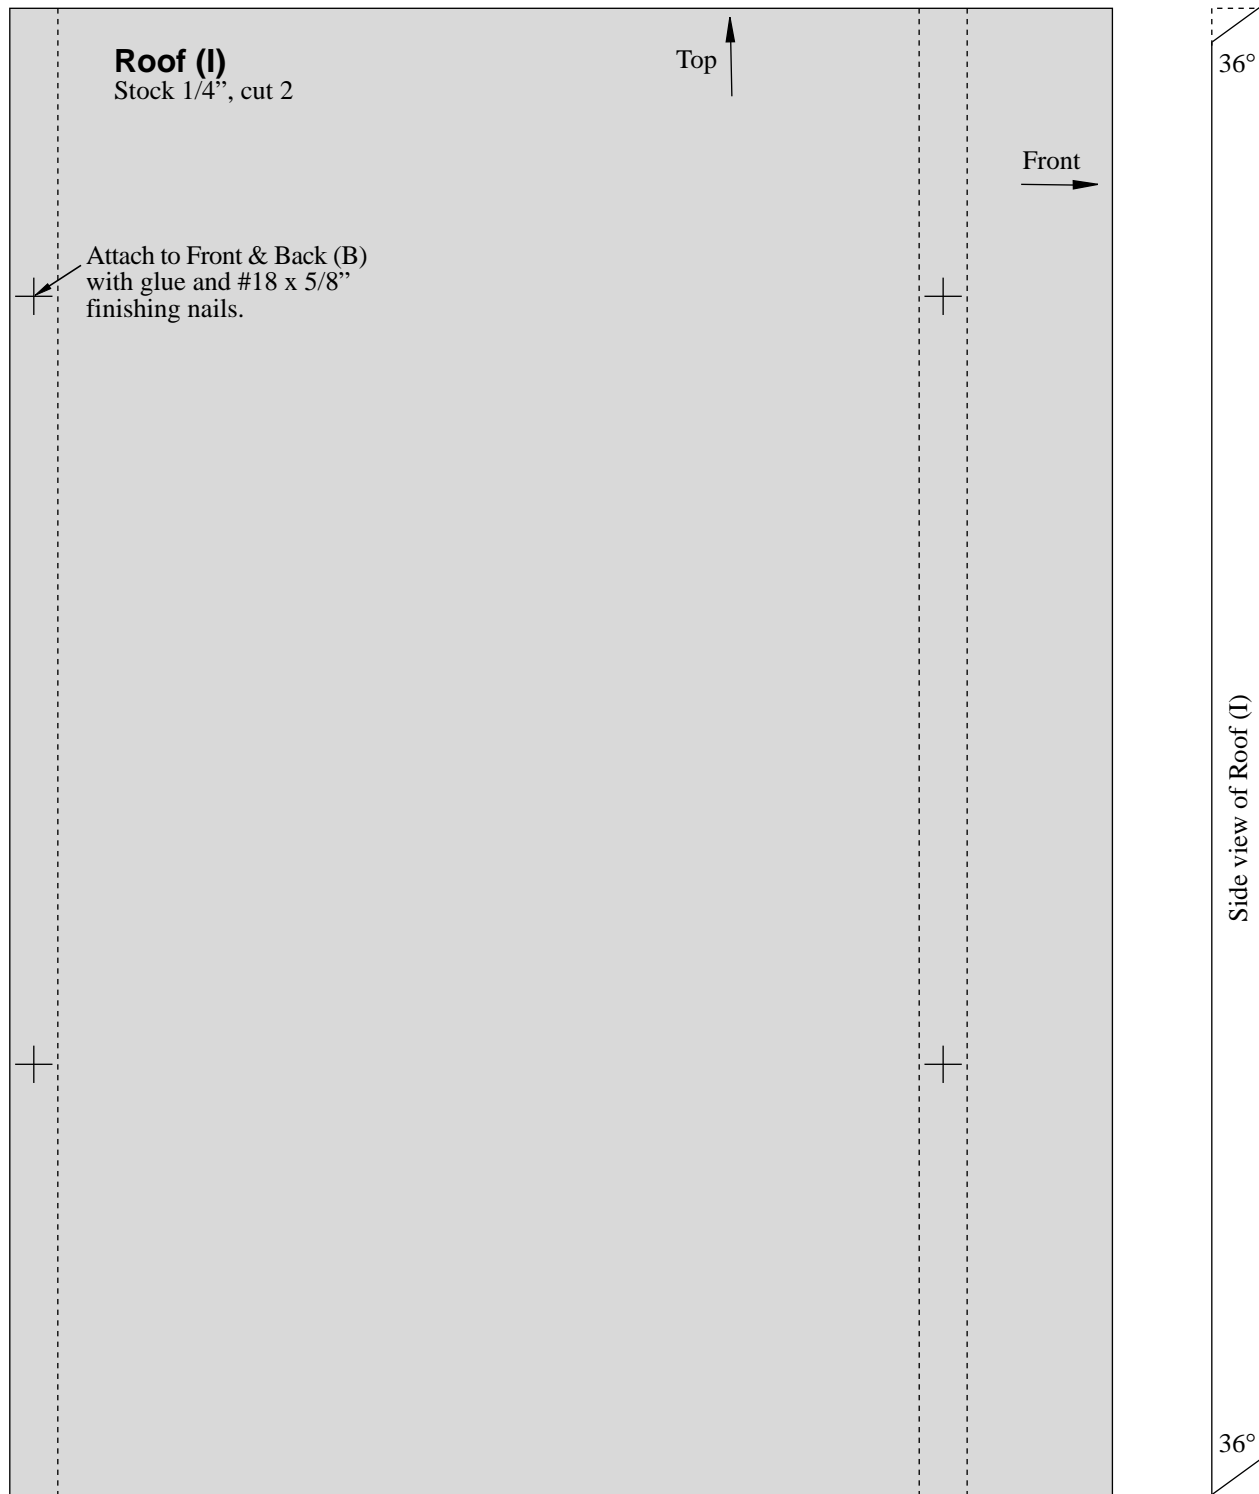


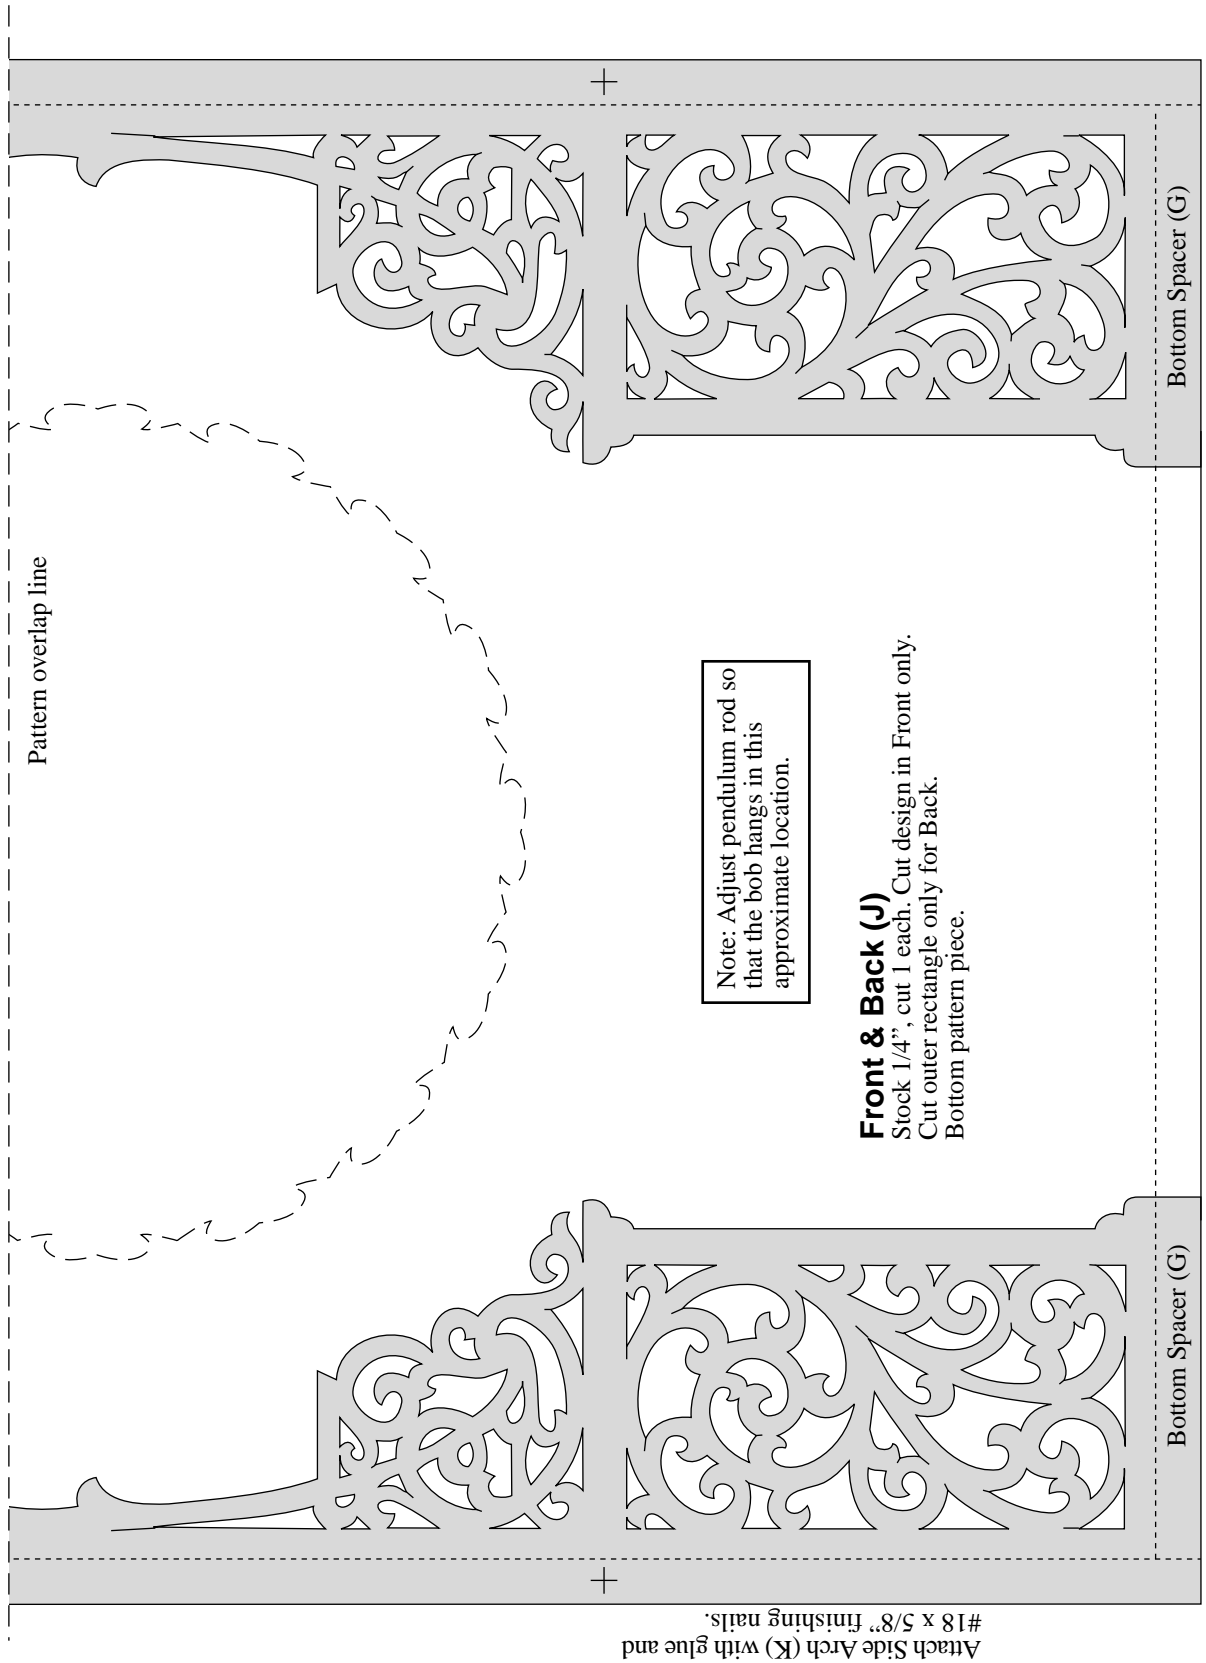

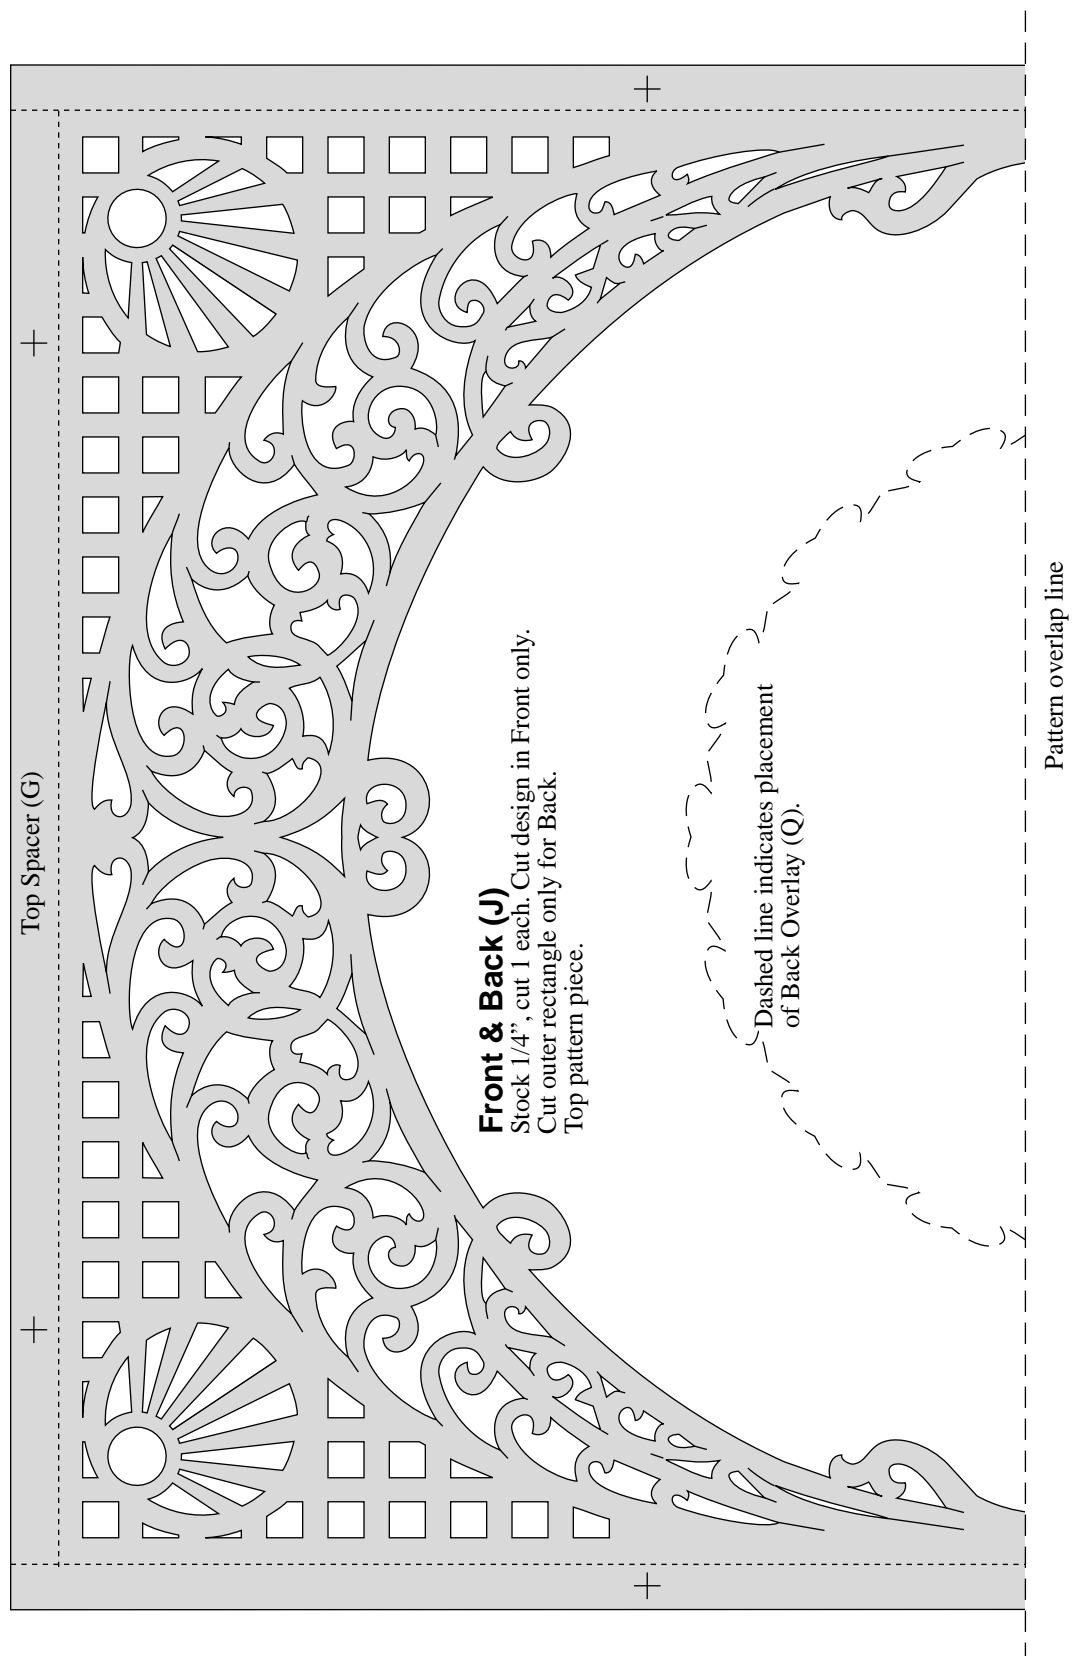

Pattern overlap line

Side Arch (K)
Stock 1/4", cut 2
Top pattern piece.

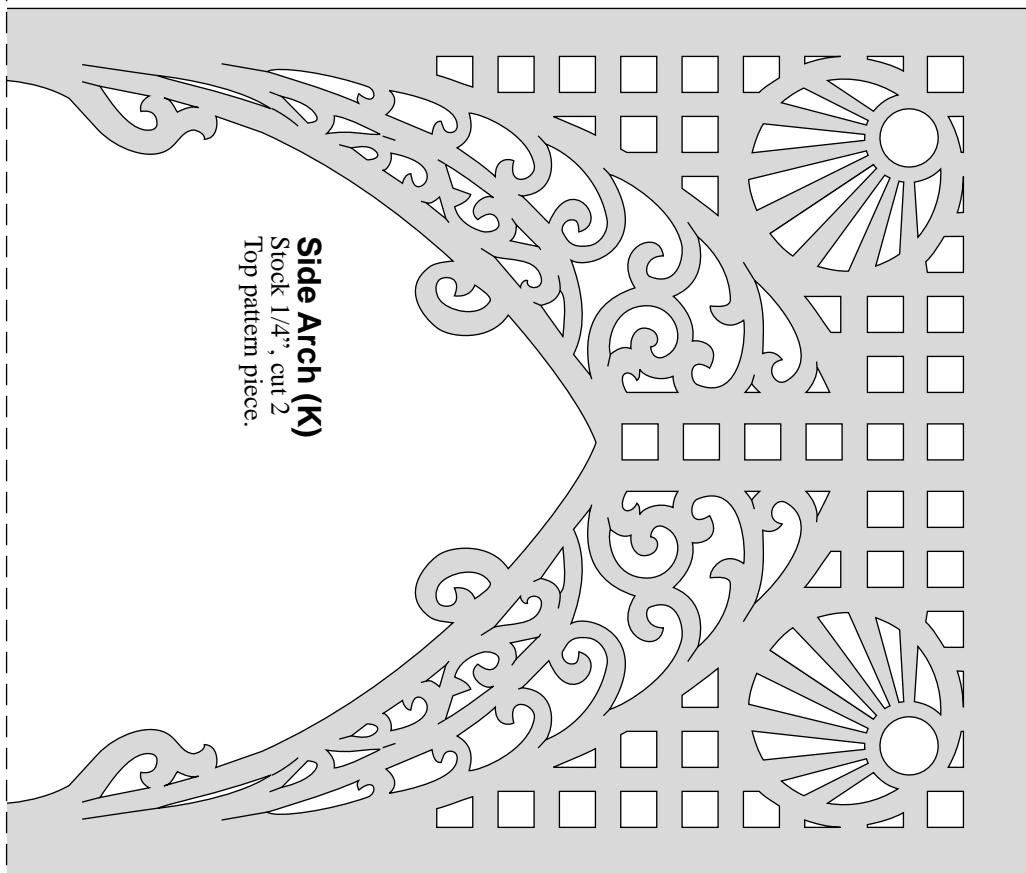

Pattern overlap line

Side Arch (K)
Stock 1/4", cut 2
Bottom pattern piece.

